



# Keypull Mounting Instructions

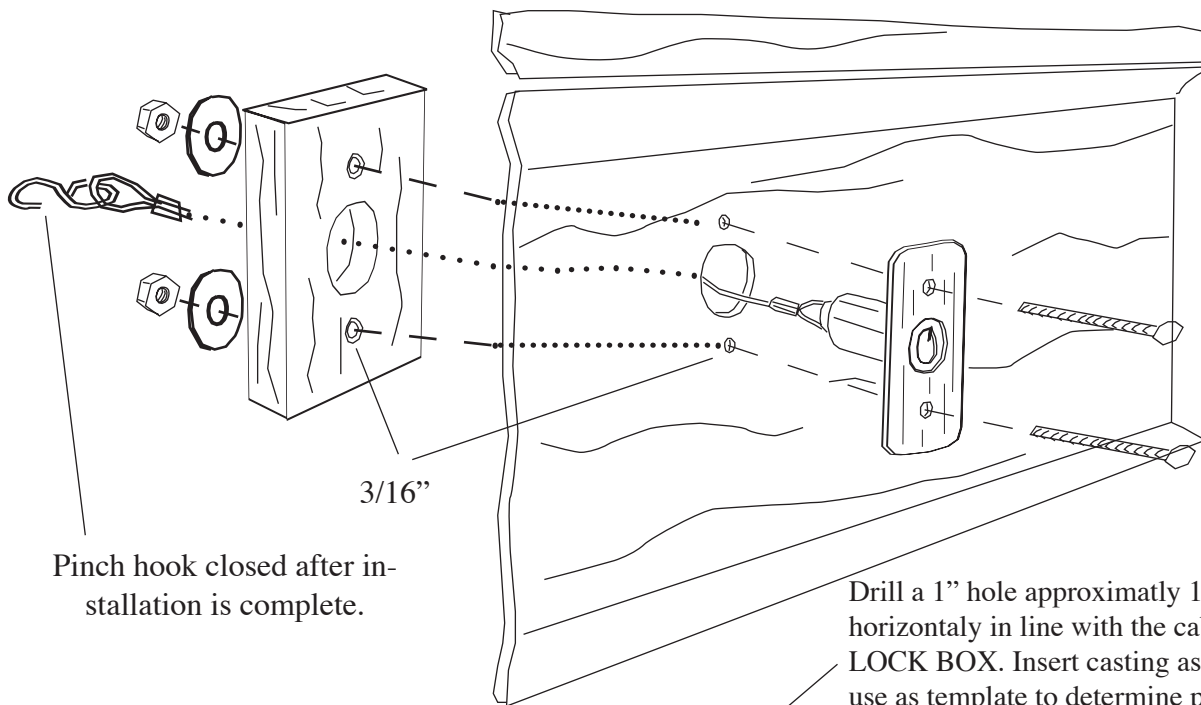

Add a 1"x 4"x6" wood block to add support and keep from crushing the insulation. Not included with kit.

Pinch hook closed after installation is complete.

Drill a 1" hole approximately 18" from this edge horizontally in line with the cable loop at the LOCK BOX. Insert casting assembly into hole and use as template to determine position of mounting bolt holes. Drill 3/16" holes at these two points.

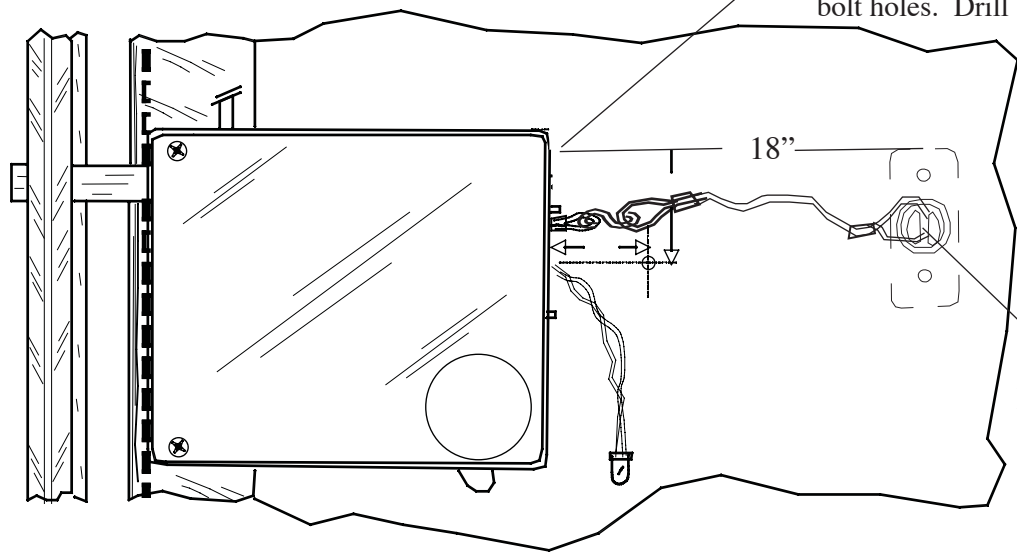

Suggestion: Drill 3/16" pilot hole from inside garage to mark location for the 1" hole.

